



## WINPLUS

<b>NORTH AMERICA</b>	375 West Apra Street Rancho Dominguez, CA 90220	Tel: 310-638-0588 Fax: 310-496-2740
<b>EUROPE</b>	Unit 4, Two Counties Estate, Falconer Road, Haverhill, Suffolk CB9 7XZ, U.K.	Tel: 44-1440-713888 Fax: 44-1440-713889
<b>AUSTRALIA</b>	Unit 2, 991 Mountain Hwy Boronia, Victoria, Australia, 3155	Tel: 61-3-9720-4143 Fax: 61-3-9720-4165
<b>NEW ZEALAND</b>	22-24 Olive Road, Penrose, Auckland, New Zealand	Tel: 64-9-5254575 Fax: 64-9-5256817
<b>ASIA</b>	Suites 6-11, 7th Floor Corporation Park, 11 On Lal Street Shatin, N.T., Hong Kong	Tel: 852-2798-8932 Fax: 852-2795-0241

© 2009 Winplus North America Inc. All Rights Reserved. Winplus, the logo design, and yada are trademarks or registered trademarks of Winplus North America Inc. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Winplus North America Inc. is under license.



YD-V24 User Manual

[www.letsyada.com](http://www.letsyada.com)

WINPLUS

Thank you for purchasing the latest Yada wireless technology product from Winplus. We hope you will enjoy all features and benefits offered by the YD-V24 Hands-Free Speakerphone. These features and benefits were designed with the goal of making wireless communication more convenient for the user.

Winplus USA  
375 W. Apra St. Rancho Dominguez, CA 90220  
info@winplususa.com  
www.winplus.com

Winplus Europe  
Unit 4, Two Counties Estate, Falconer Road,  
Haverhill, Suffolk CB9 7XZ, UK  
info@winplus-europe.com  
www.winplus.net

Winplus Asia  
Suite 6-11, 7th Fl Corporation Park  
11 On Lanai St., Shatin NT, Hong Kong  
info@winplus.net  
www.winplus.net

Winplus Australia  
Unit 2, 991 Mountain Hwy Boronia  
Victoria, Australia 3155  
customercare@winplus.com.au  
www.winplus.com.au

Winplus New Zealand  
22-24 Olive Road, Penrose  
Auckland, New Zealand  
Griffiths Equipment  
web@griffiths.co.nz  
www.types.co.nz

## SPECIFICATION

Stereo Music Mode	A2DP Bluetooth® Reception
Supported Profile	HS, HF, A/V, A2DP
Wireless Frequency	2.4 GHz
Battery	Built-in Li-Polymer Battery
Charger Power Supply	mini 5pin USB charging cable
Charging Time	about 3 hours
Transmission Range	10 meters
Size	80 x 40 x 13 mm
Weight	about 50g
Talk Time	12 hrs.
Standby Time	300 hrs.

## CONTENTS

DISCLAIMER
WARRANTY / LIABILITIES
PACKAGE CONTENT
INSTALLATIONS
BATTERY OPERATIONS
SPEAKERPHONE OPERATIONS
BUTTON FUNCTIONS AND OPERATION
CARE AND MAINTENANCE
TROUBLE SHOOTING
CUSTOMER SERVICE / CONTACT US PAGE
FCC / ICC



## DISCLAIMER

- Distracted driving is dangerous. Always use the Bluetooth® Device in a manner that does not reduce your attention and ability to drive carefully and safely.
- Adhere to all applicable traffic laws and motor vehicle regulations applicable to the device.
- Consult local laws and regulations for any restrictions on installation or use.
- Do not install on or near an airbag. Such installation could interfere with airbag deployment or could cause the product or another object to become a projectile, which could result in serious personal injury to occupants.
- Ensure the product location will not obstruct your vision while driving.
- Observe all signs that require an electrical device or RF radio product to be switched off in the designated areas. These could include hospitals, blasting areas, and potentially explosive atmospheres.
- Turn off your device prior to boarding an aircraft. Do not use your device in an aircraft.
- Never allow children to play with the device. Small parts may be a choking hazard.

## WARRANTY / LIABILITIES

### WINPLUS NORTH AMERICA LIMITED WARRANTY

WINPLUS North America warrants, to the original purchaser, that its products are free from defects in material and workmanship for 90 days from the date of original purchase. Where permitted by law, WINPLUS North America's liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and WINPLUS North America makes no other warranty of any kind aside from the limited express warranty stated above.

**Note:** Warranty only applies for North American customers or purchases made in the North America.

### CONDITIONS OF WARRANTY

If during the 90 day warranty period your new product is found to be defective, WINPLUS North America will repair such defect, or replace the product, without charge for parts or labor subject to the following conditions:

1. All repairs must be performed by WINPLUS North America.
2. All warranty claims must be accompanied by a copy of the sales receipt or bill of sale.
3. The equipment must not have been altered or damaged through negligence, accident, improper operation, or failure to follow the product instructions for installation, use, or care.
4. The replacement of parts is excluded from the warranty when replacement is necessary due to normal wear and tear.
5. Repair or replacement parts supplied by WINPLUS North America under this warranty are protected only for the unexpired portion of the original warranty.
6. This is a "repair or replace" warranty only, and does not cover the costs incurred for the installation, removal or reinstallation of the product, or damage to any mobile phone device or vehicle.

### OWNER'S RESPONSIBILITIES:

WINPLUS North America will make every effort to provide warranty service within a reasonable period of time. SHOULD YOU HAVE ANY QUESTIONS ABOUT SERVICE RECEIVED OR IF YOU WOULD LIKE ASSISTANCE IN OBTAINING SERVICE, PLEASE CALL TOLL FREE 1.866.294.9244 DURING REGULAR BUSINESS HOURS MONDAY THROUGH FRIDAY 9:00 AM TO 5:00PM.

**Note:** Toll Free # is for North America Customers ONLY. See Customer service section for customer contact numbers for other regions/offices.

In order to provide you with the proper warranty service, we request that you adhere to the following procedure:

1. Include a copy of your sales receipt or bill of sale with your unit when it is returned for warranty service.



2. If it is necessary to return your product for service, please return it securely packed, preferably in the original shipping box, and freight and insurance prepaid to the following address:  
ATTN: CUSTOMER CARE PRODUCTS RETURNS  
820 South Wanamaker Ave.  
Ontario, CA 91761
3. Please include a detailed explanation of the problem you are having.
4. If your product is found by WINPLUS North America to have a defect in material or workmanship, within the warranty period, it will be repaired or replaced at no charge and returned to you prepaid.

WINPLUS North America makes no other warranty of any kind aside from the limited express warranty stated herein.

DISCLAIMER OF WARRANTIES, INCLUDING WARRANTY OF MERCHANTABILITY AND WARRANTY OF FITNESS FOR PARTICULAR PURPOSE: EXCEPT AS SPECIFICALLY SET FORTH HEREIN, NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, IS MADE AS TO THE YD-V24 HANDS-FREE SPEAKERPHONE. EXCEPT AS EXPRESSLY SET FORTH HEREIN, WINPLUS NORTH AMERICA AND/OR ITS AFFILIATES EXPRESSLY DISCLAIMS, WITHOUT LIMITATION, ANY STATUTORY WARRANTIES AND ALL IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

WINPLUS North America and/or its affiliates are not responsible for a user's intended or actual use of the YD-V24 Hands-Free Speakerphone. In no event shall WINPLUS North America and/or its affiliates have any liability for any losses (whether direct or indirect, in contract, tort or otherwise) incurred in connection with the YD-V24 Hands-Free Speakerphone. Neither shall WINPLUS North America and/or its affiliates have any liability for any decision, action or inaction taken by any person in reliance on the YD-V24 Hands-Free Speakerphone, or for any delays, inaccuracies and/or errors in connection with the YD-V24 Hands-Free Speakerphone and its functioning.

WINPLUS North America and/or its affiliates shall have no responsibility or liability for damage and/or injury resulting from accidents while user is utilizing the YD-V24 Hands-Free Speakerphone; and WINPLUS North America and/or its affiliates, the manufacturer, distributor and seller shall not be liable for any injury, loss or damage, incidental or consequential, arising out of the use or intended use of the product.

#### **WINPLUS EUROPE LIMITED WARRANTY**

WINPLUS warrants, to the original purchaser, that its products are free from defects in material and workmanship for 12 months from the date of original purchase. Where permitted by law, WINPLUS liability shall be limited to that set forth in this limited express warranty. This limited express warranty shall be the exclusive remedy of the purchaser and WINPLUS makes no other warranty of any kind aside from the limited express warranty stated above.

#### **OWNER'S RESPONSIBILITIES:**

In order to provide you with the proper warranty service, we request that you adhere to the following procedure:

1. Include a copy of your sales receipt or bill of sale with your unit when it is returned for warranty service.
2. If it is necessary to return your product for service, please return it securely packed, preferably in the original shipping box, and freight and insurance prepaid to the following address:  
ATTN: WINPLUS BLUETOOTH® PRODUCTS RETURNS  
Unit 4, Two Counties Estate, Falconer Road  
Haverhill, Suffolk CB9 7XZ, UK
3. Please include a detailed explanation of the problem you are having.
4. If your product is found by WINPLUS to have a defect in material or workmanship, within the warranty period, it will be repaired or replaced at no charge and returned to you prepaid.

WINPLUS makes no other warranty of any kind aside from the limited express warranty stated herein.

#### **WINPLUS AUSTRALIA LIMITED WARRANTY**

This product is warranted against faulty workmanship for a period of 24 months from the date of purchase. Winplus' liability is limited to replacement of the product. Claims for associated or consequential loss or damage will not be accepted by Winplus. Product is not fitted, used or installed in accordance with instructions will not be eligible for warranty. WINPLUS makes no other warranty of any kind aside from the limited express warranty stated herein.

## PACKAGE CONTENT



Mini Speakerphone



Visor Clip



Vent Clip



Car Charger

## INSTALLATIONS

**⚠ IMPORTANT:** Before installing the YD-V24, make sure:

 
 
- Vehicle is parked in a safe area
- Car engine is off
- Emergency Brake is set

Your YD-V24 may be installed in your vehicle's air vent or sun visor.

### A. Air Vent Mounting

Follow the steps below to install the YD-V24 to your car's Air Vent:



- Attach and secure the vent mount on the back side of the YD-V24
- Slide the mount the YD-V24 to the vehicle's air vent

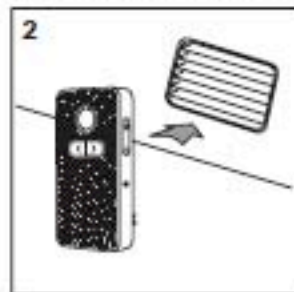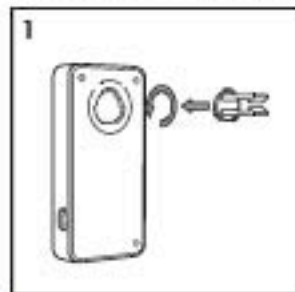

### B. Sun Visor Mounting

Follow the steps below to install the YD-V24 to your car's sunshade panel:

  - Attach and secure the visor Mount to the back side of the YD-V24
- Slide and mount the YD-V24 to the vehicle's sun visor

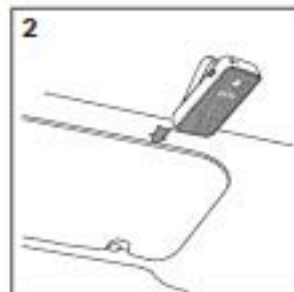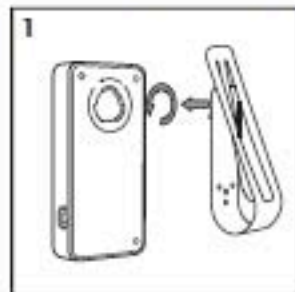



## BATTERY OPERATIONS

The YD-V24 is equipped with a built-in Li-Polymer battery, which provides better than normal phone battery life span.

**NOTE:** The YD-V24 Hands-Free Mini Speakerphone battery comes pre-charged but it is recommended to charge the battery for 8 hours before using for the first time.

### A. Low Battery Indication

Recharge battery when:

- Indicator light flash twice every 30 seconds
- YD-V24 emits a beeping sound

### B. Charging the Battery

Follow the steps below when charging the YD-V24 Hands-Free Mini Speakerphone:

- Insert the charging cable to the USB charging port of the YD-V24
- Plug the cable to a power port.
- When the device is in charging mode, the red battery indicator light is on indicating that charging is in progress

#### **NOTE:**

 
- Standard charge time is around 3 hours
- Battery indicator light will turn off once fully charged

**⚠ IMPORTANT:** Do not leave the YD-V24 Hands-Free Mini Speakerphone charging in the vehicle unattended.

#### **Note:**

- To charge the unit at home, use a 12V DC to AC convert or use a USB Power Outlet
- The device will charge whether the Master Power Switch is in either ON or OFF position

## SPEAKERPHONE OPERATIONS

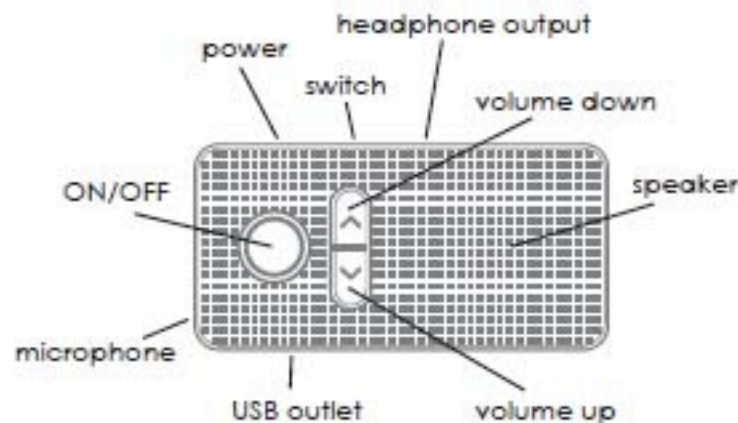

### A. Power on/off

To turn the YD-V24 on:

- Verify that the Master Power Switch is to the ON position
- Press and hold the ON/OFF button for 6 seconds till you hear beep tone then release
- The blue LED indicator will light up, indicating the standby mode was initiated

To turn the YD-V24 off:

- Press and hold the ON/OFF Button for 3 seconds (in any mode)
- The YD-V24 will shut down
- A long beep sound is heard
- Set the Master Power Switch to OFF position

## B. Pairing/Linking

Pairing Bluetooth® enabled devices like mobile phones with the YD-V24 Hands-Free Mini Speakerphone authorizes the devices to work with each. This step only needs to be performed once.

Before Pairing the YD-V24 Hands-Free Mini Speakerphone:

- Ensure the YD-V24 is fully charged
- Ensure the Bluetooth® on your mobile phone is activated
- Ensure the YD-V24 is in the OFF mode

Follow the steps below to pair your YD-V24 with your mobile phone for the first time:

- Press and hold ON/OFF key for 6 seconds
- The LED indicator alternately blinks red and blue

**Note:** YD-V24 is now in pairing mode


- Turn on your mobile phone

**Note:** The following steps are general procedure; to access Bluetooth® Menu for you mobile phone, please refer to the User Manual.

- Select SET-UP or CONNECT from your mobile phone menu
- Find and select OPTION to discover Bluetooth® devices; establishing a connection may take several minutes
- If found, phone display should indicate YD-V24 device was detected or Select "YD-V24" from the list
- Phone should give you a prompt asking if you want to pair the device
- Select OK or ACCEPT and wait for prompt to enter passkey or PIN
- Enter the code 0000
- Select "OK" to pair and connect the YD-V24 and the handset

**Note:** Under the pairing mode, if the YD-V24 and mobile handset did not successfully pair, follow the steps below to retry pairing:

- Set Master Power Switch OFF and ON
- Power on the YD-V24
- Set off all other Bluetooth® devices before starting the pairing process
- Repeat the pairing instructions from the beginning

 **IMPORTANT:** Pairing information will be lost if the Master Power Switch is set to OFF position. Re-pair the mobile phone with the YD-V24 for Hands-Free functionality.

## C. Call Operations

### A. Making/Receiving Calls

Before you make or receive calls, ensure:

- Bluetooth® connection is established between your YD-V24 and mobile phone
- Battery is fully charged

#### 1. Answering Calls

**Note:** Calls may be answered through the mobile phone

To answer calls via the YD-V24:

- The YD-V24 will ring or emit a beep sound when there is an incoming call
- Press the ON/OFF button when ring tone is heard

#### 2. Rejecting Calls

- The YD-V24 will ring or emit a beep sound when there is an incoming call
- Press and hold the ON/OFF button for 2 seconds to reject a call



### 3. Terminating a Call

**Note:** Calls may be ended through the mobile phone

To end calls via the YD-V24:

- Press the ON/OFF button

### 4. Last Number Re-dial

To call last number dialed or calls register:

- Press the ON/OFF button twice

### 5. Making a Call

**Note:** The YD-V24 doesn't have a numeric keyboard to support dialing.

Use your Bluetooth® mobile phone to make outgoing calls.

- Ensure the YD-V24 is paired with your Bluetooth® mobile phone before dialing
- Dial the number using your mobile phone key pad
- Press the call button of your mobile phone to make a call

### 6. Canceling a Call

After dialing a number but cannot go through or you don't want to continue with the call, you may cancel the action:

- Press the ON/OFF button

### 7. Interchanging YD-V24 and Handset

You may interchange the call between your handset and YD-V24 while on a call

- Press the switch key twice
- The call will be transferred to your YD-V24 unit from your mobile phone or vice versa

### 8. Adjusting the Volume

To adjust the volume while during a call:

- Press VOLUME UP key to increase speaker volume
- Press VOLUME DOWN key to decrease speaker volume

**Note:** The above-mentioned functions are only applicable to the mobile phones which support the Bluetooth® Hands-Free function. Please refer to your Bluetooth® mobile phone user manual for appropriate applications.

### 9. Mute/Un-mute Functions:

To mute the YD-V24 during an active call:

- Press switch key for 2 seconds
- The YD-V24 will emit a beep
- The YD-V24 is now in mute mode

To un-mute the YD-V24 during an active call:

- While headset is in mute mode, press switch key for 2 seconds
- The YD-V24 will emit a beep
- The YD-V24 is no longer in mute mode

### D. Listening to Music

You can listen to music from your mobile phone through your YD-V24:

- Ensure the Bluetooth® link is established between your A2DP handset and YD-V22
- Set music player using your mobile phone
- You may plug in an earphone into the 3.5 jack on your YD-V24

#### Automatic Switching between Music and Calls

If there is an incoming call while streaming music from your handset via the stereo, music will automatically pause and switch to the call. Music streaming will resume after completion of the call.

**Note:** This function is accessible for handsets that are A2DP enabled.



## BUTTON FUNCTIONS AND OPERATION

Button	Function	Operation
POWER	Master power ON or OFF switch	Master switch to on or off position and reset pairing information
Switch Key	Call Transfer (from YD-V24 to mobile or from mobile to YD-V24)	During conversation, press 2 times
	Mute/Un-mute	During an active call, press & hold for 2 seconds
ON/OFF	Soft Power On	Under off mode, press & hold for 6 seconds
	Soft Power OFF	Under standby mode, press & hold for 3 seconds
	Pairing	Under off mode, press & hold for 6 seconds
	Receive Call	Once ring tone is heard, press one time
	End call	Press 1 time
	Reject	Press & hold for 2 seconds
	Last Call Redial	Press 2 times
Stop Dialing	Press 1 time	
Volume +	Increase Volume	Press repeatedly until you reach desired volume
Volume -	Decrease Volume	Press repeatedly until you reach desired volume

## CARE AND MAINTENANCE

- Turn off the YD-V24 when not in use
- Do not let the YD-V24 be in contact with liquid as it is not waterproof. Avoid putting it in places where there is excessive moisture and humidity.
- Do not expose the YD-V24 to direct sunlight nor place in areas with high temperature, as it may result in an explosion
- If the YD-V24 is not in use for a prolonged period, store in a cool, dry place, free from moisture, humidity and dust
- Do not use abrasive cleaning solvents to clean the YD-V24
- Do not expose the YD-V24 to contact with sharp objects as this will cause scratching and damage
- Do not stick anything inside the YD-V24 as this may damage internal components
- Do not attempt to disassemble the YD-V24, as it does not contain serviceable components
- Only charge the YD-V24's built-in battery in accordance with the instructions of this user guide
- Do not disassemble the device as it may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the YD-V24 is subsequently used
- Avoid charging the YD-V24 in extremely high or low temperatures
- It's recommended to charge the YD-V24 immediately whenever low battery Poweris encountered to prolong durability & standby time of battery

## TROUBLE SHOOTING

If you are unable to hear the person on the other line clearly, do the following steps while conversation is in ongoing:

- Adjust the volume to maximum in your YD-V24 or
- Request the person on the other line to adjust his/her mobile phone volume to maximum

If there is a strong echo resounding from the person on the other line:

- Transfer the call to mobile phone.
- If echo disappeared, transfer the call again from mobile phone to YD-V24 and lower the loudspeaker volume until echo is eliminated.
- If the echo still remains, this means the echo is generated by the network service provider or mobile phone itself.

If the speaker volume of the YD-V24 is too low or too high and seems impossible to adjust it:

- Adjust the volume directly on the phone.
- Fine tune it using the volume control of the YD-V24

If you are unable to connect your speakerphone and mobile handset, please try the following:

- Ensure the YD-V24 is paired with your mobile handset/PC & battery is fully charged
- Ensure your mobile handset's Bluetooth® feature is activated. Please refer to your mobile handset user guide for specific instructions
- If your computer does not have built-in Bluetooth® capability, you will need to install a Bluetooth® USB Adapter to utilize the Speakerphone. Follow instructions for installing adapter in your computer.
- Ensure the YD-V24 is within a maximum of 10 meters of your mobile handset(s) or Bluetooth® enabled device and there are no obstructions, such as wall or other electronic devices, in between as it may cause interference transmission
- If all the above steps do not resolve your problem, please remove the battery for a while

The YD-V24 Hands-Free Mini Speakerphone is compliant with and adopts the Bluetooth® Specification V1.2. However, interoperability between the device and other Bluetooth®-enabled products is not guaranteed because it depends on compatibility. For more information on the compatibility between the device and other Bluetooth®-enabled products, please contact Customer Service.

## CUSTOMER SERVICE / CONTACT US

For questions or issues regarding the product, please visit [www.Jetsyada.com](http://www.Jetsyada.com) or contact Winplus in your area/region to speak to our customer service representative:

Winplus USA	Tel. 866-294-9244 Tel. 310-638-0588
Winplus Europe	Tel. 44-1440-713888
Winplus Australia	Tel. 61-3-9720-4143
Winplus New Zealand	Tel. 62-9-5254575
Winplus Asia	Tel. 852-2798-8932

You can also contact us online by visiting [www.winplus.com](http://www.winplus.com) for more information about the product.

IF YOU ARE EXPERIENCING ANY ISSUES WITH THE PRODUCT DURING OPERATION, DO NOT RETURN THE PRODUCT TO THE STORE. CONTACT WINPLUS DIRECTLY FOR INSTRUCTIONS ON HOW TO RETURN/EXCHANGE THE PRODUCT.



**Federal Communication Commission Interference Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
  - Increase the separation between the equipment and receiver.
  - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  - Consult the dealer or an experienced radio/TV technician for help.
- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**FCC Caution:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

**IMPORTANT NOTE:****FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

**IC Statement**

Operation is subject to the following two conditions:

1. This device may not cause interference and
2. This device must accept any interference, including interference that may cause undesired operation of the device.

This device has been designed to operate with an antenna having a maximum gain of 0 dBi. Antenna having a higher gain is strictly prohibited per regulations of Industry Canada. The required antenna impedance is 50 ohms.

**IMPORTANT NOTE:****IC Radiation Exposure Statements:**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.